




QUICKSTART GUIDE

QUICK START TO INFLATING YOUR KAYAK

This guide will lead you through the process of inflating your Infinity kayak. It has been written to be as clear as possible and provide only the details necessary to get you up and running as soon as possible.


For more in depth information please refer to the Owners Manual enclosed with your kayak.

1

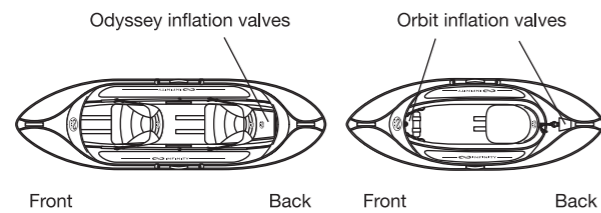


Remove the kayak from its storage bag and unfold it on a clean surface free of sharp objects.

2

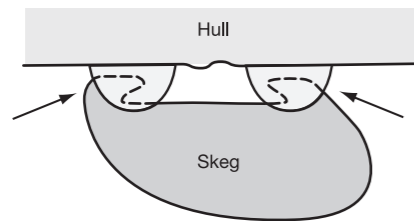

Fit the removable skeg before inflating the kayak. To do this, clip each end of the skeg into the slotted fittings at the rear of the kayak hull.

3

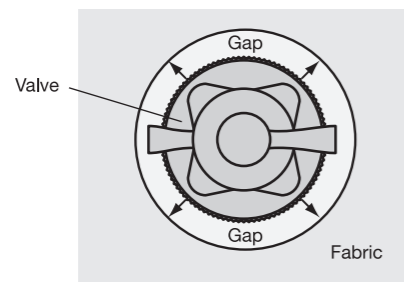


All valves are shipped loose and need tightening before inflation.

Before inflating the kayak, ensure all inflation valves are aligned with the holes in the outer fabric shell. Each valve should be positioned in the centre of the hole with an even gap around it before and after inflation.

Helpful hint – it is easier to centre the valve while the kayak is partially inflated.

4

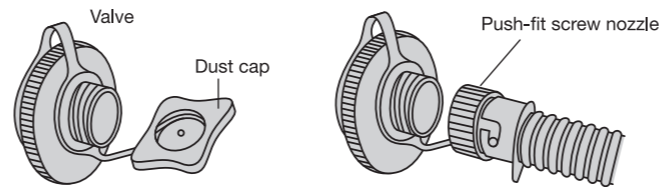

To inflate the floor and side chambers, use the push-fit screw nozzle. To inflate, unscrew and remove the valve dust cap, push the nozzle firmly into the valve and screw tight. When unscrewing the nozzle after inflation, hold the valve to prevent loosening.


After inflation make sure all dust caps and air valves are closed and screwed down tightly.

5

Inflate the main chambers on either side until firm to touch ensuring that you do not exceed the pressure of 0.1 bar (1.5 psi).


Inflate the floor chamber until firm to touch ensuring that you do not exceed the pressure of 0.1 bar (1.5 psi).

6

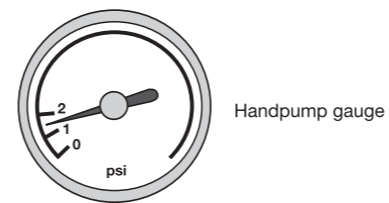

DO NOT OVER INFLATE THE CHAMBERS. They should be inflated to 1.5 psi (0.1 bar) as shown on the pump gauge.

7

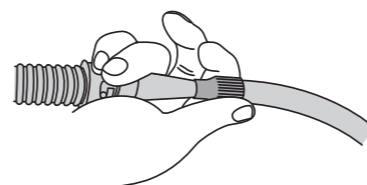


To inflate the seat, use the pump nozzle that fits tightly into the blue valve on the end of the seat tube. To inflate, open (unscrew) the blue valve and push the nozzle firmly into the valve, holding while inflating. When inflated, close (screw tight) the blue valve and remove nozzle.

8



To inflate the child seat (only included with Odyssey 375), use the nozzle that fits inside the non-return valve. Push the nozzle all the way in, inflate and then remove the nozzle. Close the non-return valve cap securely.

9

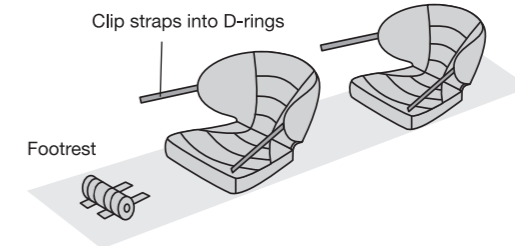

The seats and footrest attach to the floor by Velcro and can be easily adjusted or removed at any time. To fit the seats, simply choose which configuration you wish to paddle the kayak in and then position the seats accordingly. Once in position, the backrests of the adult seats need to be clipped into the appropriate D-ring attachment points and adjusted to the desired position.

Troubleshooting

Problem	Solution
Slow leak	Check valve gaskets and make sure the fabric shell is not interfering with the seal. The valve must be closed tightly.
Still leaks slowly	Check for pin hole punctures - see Owners Manual for repair instructions.
Valves don't align	If the air chambers are not aligned with the valves in the centre of the holes: a) Unzip the cover. b) Partially inflate the chamber. c) Realign the air chambers to the correct position within the fabric shell. d) Close zip cover and inflate chambers with the footpump provided. e) If the valve becomes impinged by the fabric, it can put pressure on the valve. To prevent this, ensure the valve stays clear of the fabric hole during inflation.
Doesn't inflate	Ensure the air chambers are aligned.
Stuck zipper	If a zipper is stuck, do not force it open. Instead, wash with a toothbrush and soap and water. Rinse completely once opened. Never unzip the cover when the kayak is inflated.
Drying kayak	Use the drain plug in rear of hull to drain water from the kayak and wipe down with high-absorbing sponge. Store the kayak inflated until dry. Do not place in direct sunlight to dry. Do not store while wet.